

# Poly Edge E Series Phones Pagination Quick Tips

3725-47512-001A | Poly Voice Software 8.0.0 and later | October 2022

Your phone automatically adds new pages to the **Home** screen when you reach the physical line key limit.

Use the **Pagination** key to access the following page functionality:

- Move through pages
- View activity on hidden pages
- Delete pages
- Re-add deleted pages
- Set the default **Home** page




## Move Through Pages

- » Press the **Pagination** key to move through pages 1 to 4.

## View Page Activity

A line displays under the page indicator of a hidden page that has activity. Use the **Pagination** key to access the page.

- 1 Note which page has the activity notification (line under the page indicator).

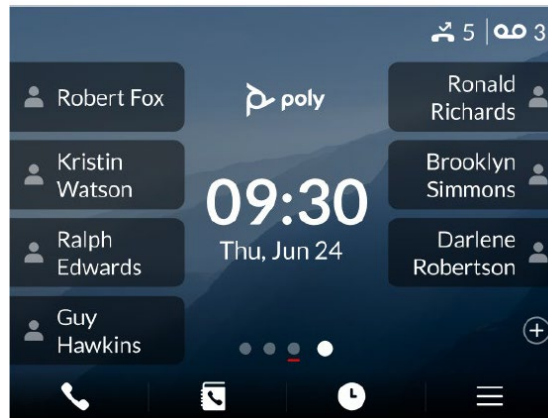


- 2 Move to the hidden page.

## Delete a Page

Delete a page that the phone auto-appends.

You can't delete a page that has speed dials. Remove all speed dials from the page you want to delete.

- 1 Move to the page you want to delete.
- 2 Press **Delete** .
- 3 Do one of the following:
  - Select **Yes** to delete the page.
  - Select **No** to return to the **Home** screen.

## Re-Add a Deleted Page

If you delete a page that the phone auto-appends, use the **Pagination** key to add it back.

- 1 Press and hold the **Pagination** key.
- 2 From the **Pagination Options** screen, select **Add New Page**.  
The new page displays.


# Set Default Home Page

Set a new default **Home** page if you want line key information from pages 2, 3, or 4 to display as the **Home** screen.

- 1 Move to the page you want to set as the new default **Home** page.



- 2 Press and hold the **Pagination** key.
- 3 From the **Pagination Options** screen, select **Make "Page N" as Default** (where  $N$  = new page).

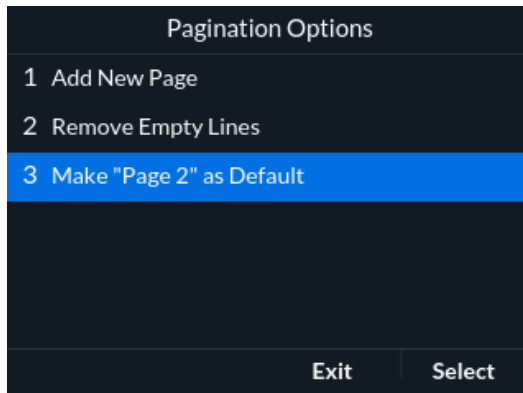

Your new default **Home** page displays with a white dot above the page indicator.

